

## CQA1045 (SI RADIO) INSTRUCTIONS

**Note:** The bottom two batteries that you insert must have the positive side of the batteries touching the springs. The top two batteries are inserted with the negative side of the batteries touching the springs.

### SETTING THE TIME

1. Press the SET button to edit the hour. Once it is blinking press the ADJ button or C/F button to adjust the hour. **Note:** You must continue to adjust the hours until AM or PM are displayed.
2. Press the SET button to then edit the minutes. Once it is blinking press the ADJ button or C/F button to adjust the minutes.
3. Once you have correctly set the time, press the SET button four times to exit the time set mode or the clock will automatically exit the time set mode after a minute.

### SETTING THE DATE

1. Press the SET button three times to edit the year. Once it is blinking press the ADJ button or C/F button to adjust the year.
2. Press the SET button to then edit the month. Once it is blinking press the ADJ button or C/F button to adjust the month.
3. Press the SET button to then edit the date. Once it is blinking press the ADJ button or C/F button to adjust the date. The day will adjust automatically according to the date.
4. Once you have correctly set the date, press the SET button to exit the date set mode or the clock will automatically exit the date set mode after a minute.

### SETTING THE TIMER

1. Press the TIME button. Press the SET button to edit the hour. Once it is blinking press the ADJ button or C/F button to adjust the hour.
2. Press the SET button to then edit the minutes. Once it is blinking press the ADJ button or C/F button to adjust the minutes.
3. Press the SET button to then edit the seconds. Once it is blinking press the ADJ button or C/F button to adjust the seconds.
4. Once the time is set, press the TIMER button to start the timer. Press the TIMER button again to stop the timer.
5. Once the timer reaches the end of its countdown a song will play. Press the TIMER button to stop the song.

### SETTING THE ALARM

1. Press the MODE button to go into alarm mode.
2. Press the SET button to edit the hour. Once it is blinking press the ADJ button or C/F button to adjust the hour. **Note:** You must continue to adjust the hours until AM or PM are displayed.
3. Press the SET button to then edit the minutes. Once it is blinking press the ADJ button or C/F button to adjust the minutes.

4. Press the SET button to then edit the snooze time. Once it is blinking press the ADJ button or C/F button to adjust the minutes.
5. Press the SET button to then edit the type of alarm sound that will play. Press the ADJ button or C/F button to adjust the sound that will play.
6. Press the SET button to then exit the alarm set mode.
7. Press the MODE button to display the current time, date and temperature.

#### **CHANGING BETWEEN FHARENHEIT AND CELSIUS**

1. Press the C/F button to change between the Fahrenheit and Celsius display.

#### **TURNING ON THE LIGHT**

1. Press and hold the LIGHT button at the top of the clock to turn on the light for the display. The light will only stay on for as long as you hold the LIGHT button.

#### **TURNING ON THE RADIO**

1. Turn the handle on the right side of the radio clockwise to power on the radio. Turning the handle clockwise also increases the volume.

#### **TURNING OFF THE RADIO**

1. Turn the handle on the right side of the radio counter clockwise to power off the radio. Turning the handle counter clockwise also decreases the volume.

#### **SCANNING FOR STATIONS**

1. Press the SCAN button on the right side of the radio to begin scanning your area for radio broadcasts. Once it finds a strong signal, the radio will begin to play that station.
2. If no broadcast was found during scanning, press the RESET button to rescan your area for a broadcast.