

Clock w/ LCD Display (JS2456)

FUNCTIONS:

1. Clock
2. Alarm
3. Date Display (Month, Date, and Day)
4. Temperature Display (Celsius or Fahrenheit)

BATTERY INSTALLATION:

1. This unit is powered by 1 AA battery. Remove the small battery cover on the back of the unit and insert 1 AA battery, observing polarity.

SETTING TIME

1. Turn the **Time Setting Knob** on the back of the clock until the hour and minute arms are set to the correct time.

SETTING ALARM

1. Slide the switch on the back of the clock to the **ON** position to turn on Alarm Mode. Slide the switch **OFF** to turn off Alarm Mode.
2. Turn the **Alarm Setting Knob** until the small arm is on the hour you would like the alarm to go off on.
3. Once alarm is ringing, turn the **Alarm Setting Knob** in any direction to silence alarm.

SETTING LCD DATE & TIME

1. Hold the **SET** button on the back of the clock until the year begins to flash.
2. Press the **UP** or **DOWN** buttons to adjust the year.
3. Press **SET** to edit the month.
4. Press the **UP** or **DOWN** buttons to adjust the month.
5. Press **SET** to edit the date.
6. Press the **UP** or **DOWN** buttons to adjust the date.
7. Press the **SET** button to edit the time.
8. Press the **UP** or **DOWN** buttons to adjust the hour.
*Note: Press the **UP** or **DOWN** buttons until PM is indicated on screen. AM is indicated when PM is not shown.*
9. Press the **SET** button to edit the minutes.
10. Press the **UP** or **DOWN** buttons to adjust the minutes.
11. Press the **SET** button to edit the seconds.
12. Press the **UP** or **DOWN** buttons to reset the seconds.
13. Press **SET** to exit the SETTING LCD DATE & TIME Mode.

CHANGING TEMPERATURE DISPLAY

1. Press the **DOWN** button to switch between Celsius and Fahrenheit.

RESETTING LCD DISPLAY

1. Press and hold the **RESET** button until the LCD display resets.