

BUTTON FUNCTIONS

- 1) **POWER SWITCH:** Must be in the "ON" position to power up the unit.
- 2) **ESCAPE:** Returns to previous screen
- 3) **PREVIOUS:** Use to navigate the menu screen. During song or video play, this button can be used as a "rewind".
- 4) **PLAY-PAUSE/SELECT:** Press the Play-Pause/Select button to enter the desired mode. Press Play-Pause/Select button to begin or end song, video or slide show play. Press to Hold for 3 seconds to power on/off the Mp4 Player.
- 5) **NEXT:** Use to navigate the menu screen. During song or video play, this button can be used as a "forward".
- 6) **MENU:** During play, push the Menu button to access additional menu options.
- 7) **VOLUME INCREASE**
- 8) **VOLUME DECREASE**
- 9) **USB PORT**
- 10) **EARPHONE JACK**

PLEASE READ AND FOLLOW THESE INSTRUCTIONS BEFORE USING YOUR MP4 PLAYER.

INSTRUCTIONS

ON: To turn on, push Power Switch to the ON position, then press and hold the (play) button for 3 seconds. The LCD Screen will light up and display a welcome logo while it is turned on.

OFF: To turn the player off, press the (play) button for 3 seconds or pus the Power Switch to the OFF position. Your player will turn off.

CHARGING: This MP4 Player includes a built in rechargeable battery. Before using, plug the large end of the included charging cable into the USB port on your computer and the mini end into the USB port on your MP4 Player. For the first use, you will need to charge for 8 hours and fully exhaust the battery (for best results).

You can recharge the battery at any time by connecting the MP4 Player to your computer with the USB cord that was provided.

Once connected, the player LCD displays

1. "Power & Date": If selected, the Mp4 is in "USB DISK" mode. You may upload files while the player is being charged.
2. "Power & Player": If selected, you may use the player and access the features while the player is being charged.
3. "USB Charge": If selected, you will charge battery only.

AFTER INITIAL USAGE, BATTERY CHARGING TIME IS APPROXIMATELY 3 HOURS FOR A FULL CHARGE.

COMPATIBLE FILES:

Music: MP3, WMA, WAV

Video: AVI, WMV

Pictures: JPEG, BMP, GIF

Games: NES 8-Digit Games

E-Book: TXT File

ADDITIONAL FEATURES/FUNCTIONS:

2G Memory

USB 2.0 Speed

Power saving setting, adjustable brightness, auto power off

7 Equalizer modes

Synchronously lyric display

Multi-Language supported

TO LOAD MEDIA FILES:

Plug the MP4 Player into the computer with the USB cord provided.

Open "My Computer" on your PC.

Your MP4 Player should be shown in "My Computer" as a Removable Disk – or Removable Storage Device.

Simply "drag and drop" or "copy and paste" your files onto the removable disk.

To maintain the highest level of quality, your Mp4 is pre-loaded with music, video and picture files for factory testing and inspections. To delete any unwanted files, simply connect the Mp4 to the computer using the instructions above and instead of "drag and drop" for adding media files, select the unwanted file and click "delete."

OPERATING INSTRUCTIONS:

MAIN MENU

In Main Menu, use "Previous" and "Next" buttons to select any of the above modes. Press (play) to enter the selected mode.

In any mode, press and hold the "Escape" button to return to the main menu.

MUSIC MODE:

Select "Music" icon and press (play) to enter the Music menu.

Use "Previous" and "Next" buttons to select the mode to play the songs.

Press (play) button to play or pause the music.

To return to the previous menu, press and hold the "Escape" button.

Music Settings:

Press "Menu" button to enter music setting menu and use "Previous" and "Next" buttons to set the music play mode, for example, music repeat mode, lyric display, equalizer mode, etc. Once selected, press (play) to confirm.

Lyric Synchronous Display: The player only supports the lyric display when the music file shares the same name as LRC file of MP3 format, and they must be in the same directory.

The Mp4 can display photos while playing music. During song play, press the “Escape” button to return to the main menu and then enter the “Pictures” mode.

Press and hold the “Escape” button to return to the main menu.

PICTURES MODE:

Select the “Pictures” icon and press (play) to enter the Pictures browse mode.

From the “Pictures” menu, select “Now Playing” to view your photos.

Use the “Previous” and “Next” buttons to select a photo.

When the picture file is opened, press the “Menu” button to access Picture Menu. In this mode, you can rotate, zoom, set slide show preferences, set photo background and delete.

Press and hold the “Escape” button to return to the main menu.

VIDEO MODE:

Select the “Video” icon and press (play) to enter the Video menu.

Use the “Previous” and “Next” buttons to select the playlist. Press (play) to play the video.

During video play, press the “Menu” button to access the video menu options.

Press and hold the “Escape” button to return to the main menu.

RECORDING MODE:

Select “Recordings” icon and press (play) to enter Record mode.

Before beginning to Record, press the “Menu” button to set the record format, record quality and/or record gain (Record gain refers to recording volume)

Press the (play) button to begin or pause recording.

Press the “Menu” button to save the current recording.

Press and hold the “Escape” button to return to the main menu.

** Recordings will be saved under “Music” mode, under the playlist “Recordings”.

E BOOK MODE:

Select the “EBook” icon and press (play) to enter Ebook mode.

Use the “Previous” and “Next” buttons to select the playlist. Press (play) to select the TXT file.

Press the “Menu” button to access the Ebook menu options.

Press and hold the “Escape” button to return to the main menu.

TOOLS:

The player includes a stopwatch function, calculator and calendar function. Use the “Previous” and “Next” buttons to navigate the menu and press (play) to select the function.

Use the “Previous”, “Next” and (play) buttons to navigate the functions.

Press and hold the “Escape” button to return to the main menu.

Use the “Previous”, “Next” and (play) buttons to navigate the functions.

Press and hold the “Escape” button to return to the main menu.

GAME MODE:

Select the “Game” icon and press (play) to enter the Game mode.

Use the “Previous” and “Next” buttons to select a game and press (play) to enter and play.

Press and hold the “Escape” button to return to the main menu.

FILE NAVIGATOR:

Select the “File Navi” icon and press (play) to enter the File Navigator mode and select “Internal Memory”. This mode displays the system folder list. Use the “Previous” and “Next” buttons to navigate the list.

Press (play) to open a file.

Press the “Menu” button to move, copy or delete the file.

Press and hold the “Escape” button to return to the main menu.

SETTINGS:

Select the “Settings” icon and press (play) to enter the Settings Menu.

Use the “Previous” and “Next” buttons to select a setting and press (play) to access the menu options. Follow the on screen instructions to adjust settings.

Press and hold the “Escape” button to return to the main menu.

TROUBLE SHOOTING

Q: Player will not turn on

A: Please check to ensure the Power Switch is in the ON position and hold the (play) button for 3 seconds. Also check to ensure the battery is charged.

Q: Screen goes black

A: Please check the display setting. On the MP4 player, go to “Settings”, select “Display”, select “Backlight” and select length of time for the backlight to remain illuminated. (Backlight turns off to save battery power).

Q: Cannot hear sound in the earphones

A: Please check to ensure the volume level is not set to zero. Also check to ensure the earphones are properly connected to the Mp4 player.

Q: Computer does not recognize the player when connected.

A: Please check to ensure the USB is properly connected. You may try a different USB port to ensure the connection is not faulty. You may need to restart your computer.

Q: Failure to download/upload media files

A: Please check whether the memory space is full

TECHNICAL ASSISTANCE/PRODUCT WARRANTY:

Do not return this product to the place of purchase. For questions or warranty information, contact the manufacturer directly.

Contact GNBI Technical Support

By telephone: 1-866-541-4624

By email: GnbiTech@aol.com